


☐

I'm not robot

  
reCAPTCHA

Continue



AVERTISSEMENT

**AVERTISSEMENT** : Prière de suivre toutes ces instructions afin d'assurer la sécurité de votre enfant. Conserver ces instructions pour consultation future.

**AVERTISSEMENT** : Négliger d'observer ces directives pourrait entraîner de **sérieuses blessures** ou même la mort. Afin d'éviter les blessures graves dues à une chute ou une glissade, toujours utiliser le harnais de sécurité et vous assurer que les enfants sont placés de façon appropriée, selon les présentes instructions.

**AVERTISSEMENT** : Ne jamais laisser un enfant sans surveillance.

\*\*\*\*\*

- Les sacs à main, sacs à provisions, sacs à couchers ou accessoires peuvent modifier l'équilibre de la poussette et causer des conditions instables et dangereuses.
- Le poids maximum qui peut être transporté dans le panier est 2,25 kg (5 livres). Le poids maximum qui peut être transporté sur le plateau parents est 1,36 kg (3 livres). Poche de ceinture de sécurité: Pour sécuriser la ceinture de sécurité seulement, le poids maximum est de 0,45 kg (1 livre). L'exès de poids peut affecter l'équilibre de la poussette et la rendre instable ou dangereuse.
- Assurez-vous que la poussette est entièrement déployée et bloquée en position stable avant de laisser votre enfant s'en approcher.
- Le plateau arrière est conçu pour un enfant qui a au moins 2 1/2 ans et n'est pas plus de 107,6 cm (42 pouces) de hauteur. L'utilisation de la poussette avec deux (2) enfants pesant plus de 22,6 kg (50 livres) chacun, ou dont le poids total excède 45,3 kg (100 livres), peut provoquer une chute et un stress excessif sur la poussette, ceci peut affecter l'équilibre de la poussette et la rendre instable ou dangereuse.
- N'utilisez JAMAIS la poussette dans des escaliers ou des éleveurs.
- Ne laissez JAMAIS un enfant utiliser la poussette comme un jouet.
- Nettoyez avec un savon ou un détergent doux et de l'eau chaude à l'aide d'une éponge ou d'un chiffon propre.
- Vérifiez régulièrement la poussette pour détecter la présence de vis desserrées, de pièces usées, de liens détachés ou décolorés. Remplacez ou réparez les pièces au besoin.
- Cessez d'utiliser la poussette si elle a une défaillance ou est endommagée. Communiquez avec notre service à la clientèle afin de prendre arrangement pour une réparation ou obtenir des pièces de remplacement.

Si vous éprouvez des problèmes concernant l'assemblage, les pièces manquantes, ou l'utilisation, NE RETOURNEZ PAS l'article au magasin. Les magasins ne peuvent pas vous rendre l'information concernant l'assemblage, des pièces manquantes, ou l'utilisation du produit.

Contactez notre département services à la clientèle pour vous aider à 1-800-328-7363 Lundi - Vendredi entre 9h00 et 16h30 (HNP).

PARTS PIEZAS PIÈCES

Check that you have all the parts for this model before assembling the stroller.  
Vérifiez que vous avez bien toutes les pièces pour ce modèle avant de monter la poussette.

3

Copyright © 2011, Baby Trend Inc. All Rights Reserved. Todos los derechos reservados. Tous droits réservés.

Read all instructions **BEFORE** assembly and **USE** of product.  
**KEEP INSTRUCTIONS FOR FUTURE USE.**

**baby trend**

Model #7311

**Sit N Stand LX Tandem Stroller**  
with Car Seat Snap N Go Attachment System

**Instruction Manual**

01.06

Convenience through innovation and thoughtful design

8

The protruding rivet on the outside of the frame tube should be above the tray latch. IF YOU EXPERIENCE ANY DIFFICULTY IN USING THIS PRODUCT, PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT (800) 328-7363 BETWEEN THE HOURS OF 8:00AM AND 4:30PM PACIFIC STANDARD TIME FOR ASSISTANCE.TO ATTACH AN INFANT CAR SEAT. 3.Fig. To release, apply pressure to both sides of the male clip until the clip is released. To release, apply pressure to both sides of the male clip until the clip is released. See figure 20. CANOPY1. To attach the front wheels, unfold stroller as described in the section following. Please see figure 17. Push downward on the footrest until it locks onto the wheels protruding from both sides of each leg and snaps onto the U-shaped frame cross member. Recline the front seat back. Test that both latches are fully engaged prior to placing your child in the stroller. Page 27TO ENSURE SAFE OPERATION OF YOUR STROLLER, PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY. To engage brakes, apply light downward pressure to the brake lever located on each rear wheel. Always use the safety belts and insure that the children are properly positioned according to these instructions. Check that the tray is securely latched in place. Position the child on the platform on the back of the stroller. WARNING: The child's tray is not a restraint device; always secure your child with the seat belt. 14.Release ButtonFold ButtonFig. Please see figure 10.3. To fold the stroller slide the red fold latch safety button in the center of the handle and squeeze the red handle while pushing forward on the handle. Be sure child is facing forward and hands are holding frame. The stroller has spring-loaded latches on both sides of the frame. Note: Seat does not fully recline.Fig. Your stroller is now ready to useWARNING: Avoid serious injury from falling or sliding out. 2.3. Lean the stroller forward to rest on the front wheels. Pull on the rear wheel assembly to ensure that it is securely attached to the stroller. To remove the canopy, press the lock button on the end of the male fitting while pulling upward on the canopy. 5.TO USE JUMP SEAT 1. Remove stroller from box. 4.Fig. The stroller may require slight forward or rearward movement in order to line up the teeth on the brake with each wheel brake cluster. Please see figure 6. NOTE: Most brands of infant car seats will lock onto the front bar, and some brands may simply rest on the front bar, FOR SAFE OPERATION, IT IS VERY IMPORTANT THAT THE CAR SEAT STRAP IS ALWAYS TIGHTLY FASTENED AROUND THE CAR SEAT.4. Strap the safety belt over the car seat and through the seat belt slots on your car seat, connect the buckles together. The canopy may be folded



may fold the stroller or, if you need to reduce the size of the folded stroller, may be folded back toward the rear of the stroller. Buckle child standing safety belt. Be sure the child's feet are fully on the platform at all times. SEATBACK POSITIONING1. Please see figure 7. Do Not allow children near stroller while folding.1. Close the canopy as described in the Canopy section above. 17.Fig. 13.Fig. 9.3. To release, apply pressure to both sides of each male clip until the clip is released. Tighten the harness to be snug around the child's waist and over the child's shoulders. Once the stroller begins to fold, release the red handle and pull upward on the child tray until the stroller is folded. Press the rear wheel assembly onto the rear frame tubes being careful that the push buttons on the forward side of each rear tube engage the buckle on the forward side of each rear wheel housing. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. Make sure the snap n go attachment bar locks in place before attaching the car seat. Also, the tray may be released on either side and will swing away for easy access to your child. 11.Fig. Secure the safety belt behind child and engage buckle. Push each front wheel assembly onto the front tube being careful that wheel assembly locks onto the front leg. 20.WARNING: Avoid serious injury from falling. Do Not use the Snap N Go bar if it is not securely locked onto both sides of the stroller.7 Copyright © 2006 - 2007, Baby Trend Inc., All Rights Reserved. WARNING: Never leave children unattended.PARTS Parent Tray Child Tray Front Wheels Canopy Snap N Go Attachment Foot Rest Rear Wheels Stroller ASSEMBLING TO ENSURE SAFE OPERATION OF YOUR STROLLER, PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY. Check that the stroller will not move and that the brakes are properly applied. Pull backward on the rear frame tube to move back. Keep these instructions for future reference. 8a.TO SECURE CHILD 4 Copyright © 2006 - 2007, Baby Trend Inc., All Rights Reserved.Page 5BRAKESWARNING: Always set brakes when the stroller is not being pushed so that the stroller will not roll away. This process requires a moderate amount of effort so as to prevent an accidental release by your child. 6. See figure 18. Please see figure 15. Secure the stroller in the folded position by latching the fold latch, located on the right side of the stroller handle, over the extended rivet on the armrest. Insert the male end of each shoulder / waist belt into the buckle on the crotch strap. NOTE: Buckles may be hard to release when 1st used.1. The rear platform and jump seat are designed to accommodate a child who is at least 2 1/2 years old, has good balance and coordination, and is not over 40 inches tall. Fig. Check that the car seat is secure before using the stroller Fig. Lift up on the stroller handle with both hands until the stroller frame is erect and locked in the open position. DO NOT lift the stroller by the child's tray. 8a.2. Carefully place the child in the stroller seat and bring the safety harness around the child's waist and over the shoulders. Campus Ave. The stroller may require slight forward or rearward movement in order to line up the teeth on the brake with each wheel brake cluster. Position the front wheel assembly at the front tube such that the large hole in the swivel assembly will slide onto the front tube. Select the loop position that places the shoulder strap level with, or below the top of the child's shoulder and feed the shoulder harness under the correct loop. 3.4. Ensure that the wheels are firmly locked into place. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.ASSEMBLY1. 15.Fig. 9.Fig. To recline the seat, rotate the recline bar and press backward on the seat back. The front wheels, rear wheels, child tray, and canopy need to be installed prior to use. Adjust the seat belt to be snug around the child's waist. Tighten the strap so the car seat fits snug and can't move. To remove front child tray, pull outward on the latches and pull outward on the tray. 7.Fig. WARNING: Failure to follow these instructions could result in serious injury or death. You may have to rotate the front wheels to fold the stroller completely. 13. Remove the child tray.2. Slide snap n go attachment bar into the female slots located on the frame tube. Never leave stroller unattended on a hill or incline as the stroller may slide down the hill. To release, gently lift up on the brake lever. The canopy will ratchet forward or back to block the sun. 18.TO FOLD STROLLER6 Copyright © 2006 - 2007, Baby Trend Inc., All Rights Reserved.Page 61. Avoid serious injury from falling or sliding out. Pull forward on the front canopy frame tube to move forward. 2.Fig. TO SECURE FRONT CHILD1 The shoulder straps of the 5-point harness has 2 attachment positions. 16.Fig. To attach the rear wheels, position the rear axle and wheel assembly such that the brake levers are facing to the rear of the stroller. Do Not use the stroller if the wheels are not locked into place, but rather contact our customer service department immediately at (800) 328-7363, between the hours of 8:00am and 4:30pm PST, for assistance.5. Snap footrest onto front legs of stroller just below the seat. 1. 1.Fig. The front seat has a two position recline. Push backward on the latch until snapped into place. 5.Fig. Please note that you may attach or remove one end at a time. Replace or repair parts as needed.\* Discontinue use of stroller should it malfunction or become damaged. Always fold the canopy prior to folding the stroller frame. Fig. Excessive weight may cause a hazardous unstable condition to exist.\* Be certain the stroller is completely opened and locked in place before allowing a child near the stroller.\* The rear stand on platform is designed for a child who is at least 2 1/2 years old and is not over 40 inches tall. ASSEMBLY 1. Parts Hotline: 1567 S. 4. See figure 14. 3. 19.Fig. 7. Check that the tray is securely latched in place. 11.2. Adjust the seat belt to be snug around the child's waist. Always use the safety belts and insure that the children are properly positioned according to these instructions.WARNING: Never leave children unattended.\* Purse, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause a hazardous, unstable condition.\* The maximum weight that can be carried in the storage basket is 5 lbs. \* Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Test that both latches are fully engaged prior to placing your child in the stroller. 8.Fig. 12.TO USE JUMP SEAT5 Copyright © 2006 - 2007, Baby Trend Inc., All Rights Reserved.Page 7TO UNFOLD STROLLERTO UNFOLD STROLLERDo Not allow children near stroller while unfolding.1. Release the folding latch, which is located on the right side. To place the seat in the upright position, press upward on the seat back while rotating the recline bar.2. The upright position should be used only for a child that is at least 6 months old. To close canopy, pull the front edge toward the rear of the stroller until folded. The protruding rivet on the outside of the frame tube should be above the tray latch. © 2012–2022, manualsdir.comAll rights reserved. 2. 1.6. To attach the front child tray, push the tray onto the front frame tube, lining up the tray between the protruding rivet and the seat. The stroller has spring-loaded latches on both sides of the frame. To attach the front canopy, line up the male fittings on the canopy with the female fittings on the armrest and push both fittings downward until snapped into place. 4.Snap N Go AttachmentParent Tray3 Copyright © 2006 - 2007, Baby Trend Inc., All Rights Reserved.Page 3WARNING: Please follow all of these instructions to ensure the safety of your child. See figure 19.3. Place car seat onto front bar. 10.Shoulder StrapsSqueezeCrotch StrapWaistStrapAdjust for as snug fitTO SECURE REAR STANDING CHILD Fig. 4.BRAKES WARNING: Always set brakes when the stroller is not being pushed so that the stroller will not roll away. Keep these instructions for future reference.WARNING: Failure to follow these instructions could result in serious injury or death. To attach the front child tray, push the tray onto the front frame tube, lining up the tray between the protruding rivet and the seat. 12. Push forward on the front edge of the canopy to open. The front wheels, rear wheels, child tray, and canopy need to be installed prior to use.2. To attach the front wheels, unfold stroller as described in the section following. Please do not return to the store as once it is returned it cannot be resold and the materials and energy used to make it are wasted.To contact us: Baby Trend, Inc. The maximum weight that can be carried in the Parent Tray is 3 lbs. Use of the stroller with two (2) children weighing more than 40 pounds each, or children totaling more than 80 pounds, will cause excessive wear and stress on the stroller and may cause a hazardous unstable condition to exist.\* DO NOT use the stroller on stairways or escalators.\* Never allow your stroller to be used as a toy.\* To clean use only mild household soap or detergent and warm water on a sponge or clean cloth. Please note that you may attach or remove one end at a time. 11. This process requires a moderate amount of effort so as to prevent an accidental release by your child. Always use the seat belt. See figure 13.TO UNFOLD STROLLER TO UNFOLD STROLLER Do Not allow children near stroller while unfolding. Use care when attaching the child's tray on the stroller with a child in the stroller. Read all instructions BEFORE assembly and USE of product. See figure 13. Please see figure 18.Fig. KEEP INSTRUCTIONS FOR FUTURE USE. Lean the stroller backwards so that it rests on the handle and rear frame tubes and the front wheel tubes are pointing upward. Pull on the wheel assembly to ensure that it is securely attached to the stroller. 8. Push the jump seat bench to its most forward position. Have child sit on the jump seat facing backwards. Release the folding latch, which is located on the right side. 6.Fig. 5 and Fig. Never leave stroller unattended on a hill or incline as the stroller may slide down the hill.1. To engage brakes, apply light downward pressure to the brake lever located on each rear wheel. Please contact our customer service department to arrange for repair or obtain replacement parts.Please: If you experience any difficulty with the use of our product or have a question regarding these instructions, please contact our Customer Service Department at (800) 328-7363 between the hours of 8:00 am and 4:30 pm Pacific Standard Time or visit us online at www.babytrend.com. (800) 328-7363 Ontario, CA 91761 8:00 am and 4:30 pm Pacific Standard Time2 Copyright © 2006 - 2007, Baby Trend Inc., All Rights Reserved.Page 46. Model #: 7311 LX, 7315 LX, 7318 LX, 7348 LX, 7374 LX, 7381 LX, 7392 LX Sit N Stand LX Tandem Stroller with Car Seat Snap N Go Attachment System US PATENT #5,664,795 Instruction Manual Convenience through innovation and thoughtful design 05.07 Copyright © 2006 - 2007, Baby Trend Inc., All Rights Reserved.WARNINGS WARNING: Please follow all of these instructions to ensure the safety of your child. See figure 10.2. Be sure that the child's feet are fully on the platform at all times.Fig. To remove front child tray, pull forward on the locking lever on the tray arms to unlock. To open the canopy, push forward on the front frame of the canopies. Secure the seat belt, which is attached to the back of the seat, around the child's waist, and buckle to the crotch strap. See figure 18.2. Lift up on the stroller handle with both hands until the stroller frame is erect and locked in the open position. Please see figure 16.TO REMOVE FRONT CHILD TRAY1. Place the crotch strap and between the child's legs.

As a notable specialist retailer with decades’ worth of experience in all things baby related, Mothercare is here to help parents and children create their life story. From busy mornings and sleepless nights to family adventures and special occasions, Mothercare offers support for every step of your journey with their range of children’s clothing, toys, nursery essentials, pushchairs, ... 28/05/2022 · From New York magazine: Raffi Gessen-Gould, age 6, is an expert on these topics: Greek gods, international currency exchange, sharks, geology, when his father will go bald (when Raffi is a teenager), invisibility cloaks, waffles, slingshotting stretchy rubber snakes across the living room, making slime without his mom, and the benefits of getting slime stains on the ... Search & compare low priced easyJet flights to 100's of destinations Book plane tickets at a great price & jet off with easyJet 17/05/2022 · The officer may refer you to an adjacent X-ray machine to have your bags inspected or may refer you for a manual hand search of your bags. Any search more intrusive than a bag search is rare and is usually indicated only if some sort of probable cause has been established through questioning or during the bag search to suggest suspicious activity.